

TECNOLUMEN

TECNOLUMEN GmbH & Co. KG • Lötzeener Str. 2-4 • D-28207 Bremen • Tel (0421) 430 41 70 • Fax (0421) 4986685

Assembly instructions and important information HLWS 03 triple light ceiling rail

Technical details:

Power supply: 110-240 V / 50-60 Hz

Bulb socket: E27

Protection class: I

Maximum wattage (thermal):

3 x 75 W

Recommended bulbs:

energy-saving bulb 15 W

Note:

This specified maximum wattage applies to conventional bulbs. Since these have however been off the market since 01.09.2009, we recommend energy-saving bulbs with about 1/5 of the specified wattage.

Halogen bulbs are not suitable because these become much hotter than conventional bulbs.

Safety instructions:

- This luminaire may only be wired to the mains by a qualified electrician.
Improper connection causes safety hazards!
- Always ensure that the electricity is switched off when working on the luminaire or changing the bulb.
- Have repair work performed only by an authorized electrician, because electrical power can cause severe injuries!
- Some of the lamp components may get very hot in operation! Avoid skin contact with these components to prevent burns.

Notes on the glass lampshade and care of lamp:

These coloured glass lampshades are blown into shape by mouth, using a glassblower's pipe. Unevenness of the surface as well as the inclusion of tiny air bubbles is quite normal, but does not adversely affect the lighting quality. Neither can it be avoided that individual glass shades may show tolerances in their internal diameters.

Use a standard commercial cleaner for cleaning the glass shade.
For cleaning the ceiling rail use a rinsing agent or a glass cleaner.

Mounting the luminaire:

- Mark the position of the drilled holes on the room's ceiling through the drilled holes in the ceiling rail.
- Make the drilled holes with masonry drill.
- Now shorten the power cables to the desired length and guide it into the ceiling rail and turn in the PVC-screws of the strain reliefs.
- Have the electrical connection installed by an electrician as shown in the connection diagram.
- Fit the ceiling rail on the room's ceiling with the enclosed screws and rawplugs.

Removal of the glass lampshade:

To remove the glass shade from the lamp, unscrew "collar 1" anti-clockwise from the threaded tube, thus loosening "locking cross 1". You can now draw the glass shade upwards and unscrew "collar 2" and "locking cross 2" in the same manner. "Locking cross 2" can now be drawn through the holder and the glass opening.

Connection diagram:

